



LVR31 SYSTEM CONNECTION software V4.2


CONFIGURATION #1
ON/OFF via low current switch

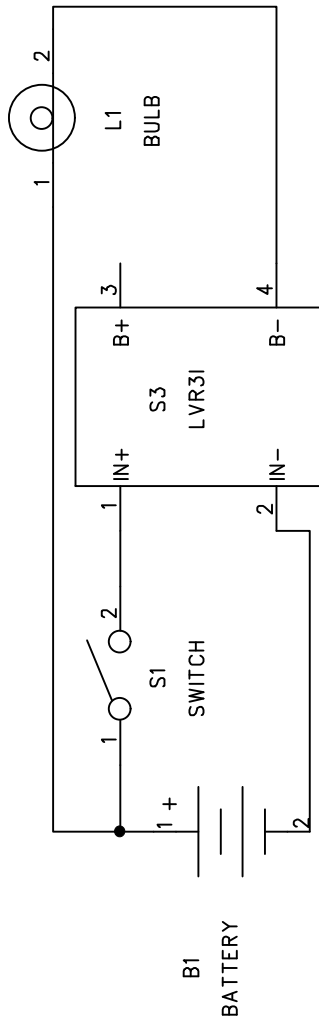

CONFIGURATION #3
ON/OFF via button on LVR31 PCB

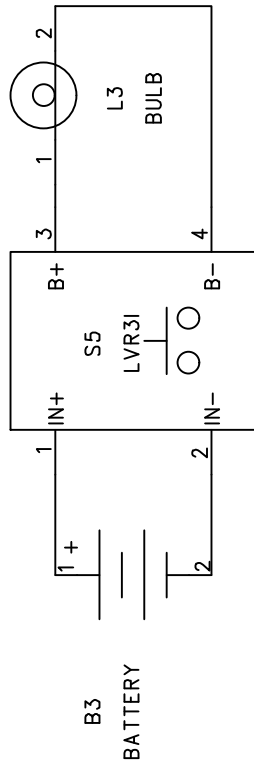

CONFIGURATION #2
ON/OFF via high current switch

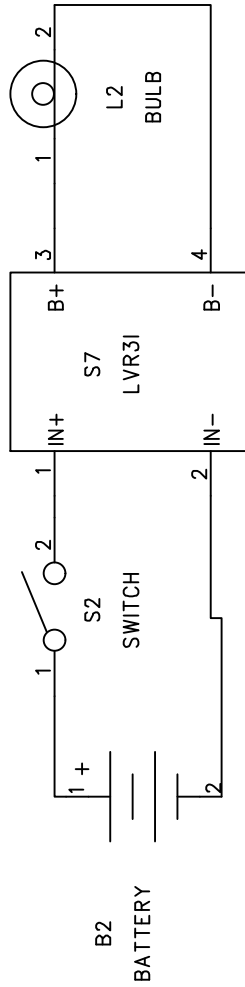

CONFIGURATION #4
ON/OFF via high current switch with bulb sensing auto ON/OFF

